



User Manual

How to flash LED tag for CAB0-CAB1-VBL7


Step 1: Open the software and connect the BU01 reader, display the connected status

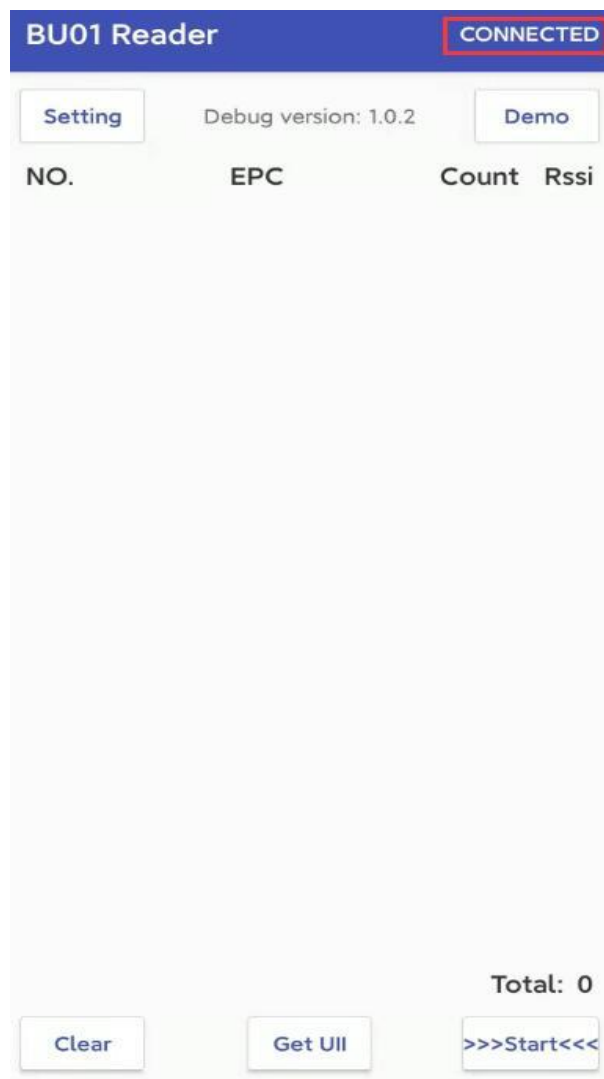

Step 2: Click start to start the inventory and select the specified label.

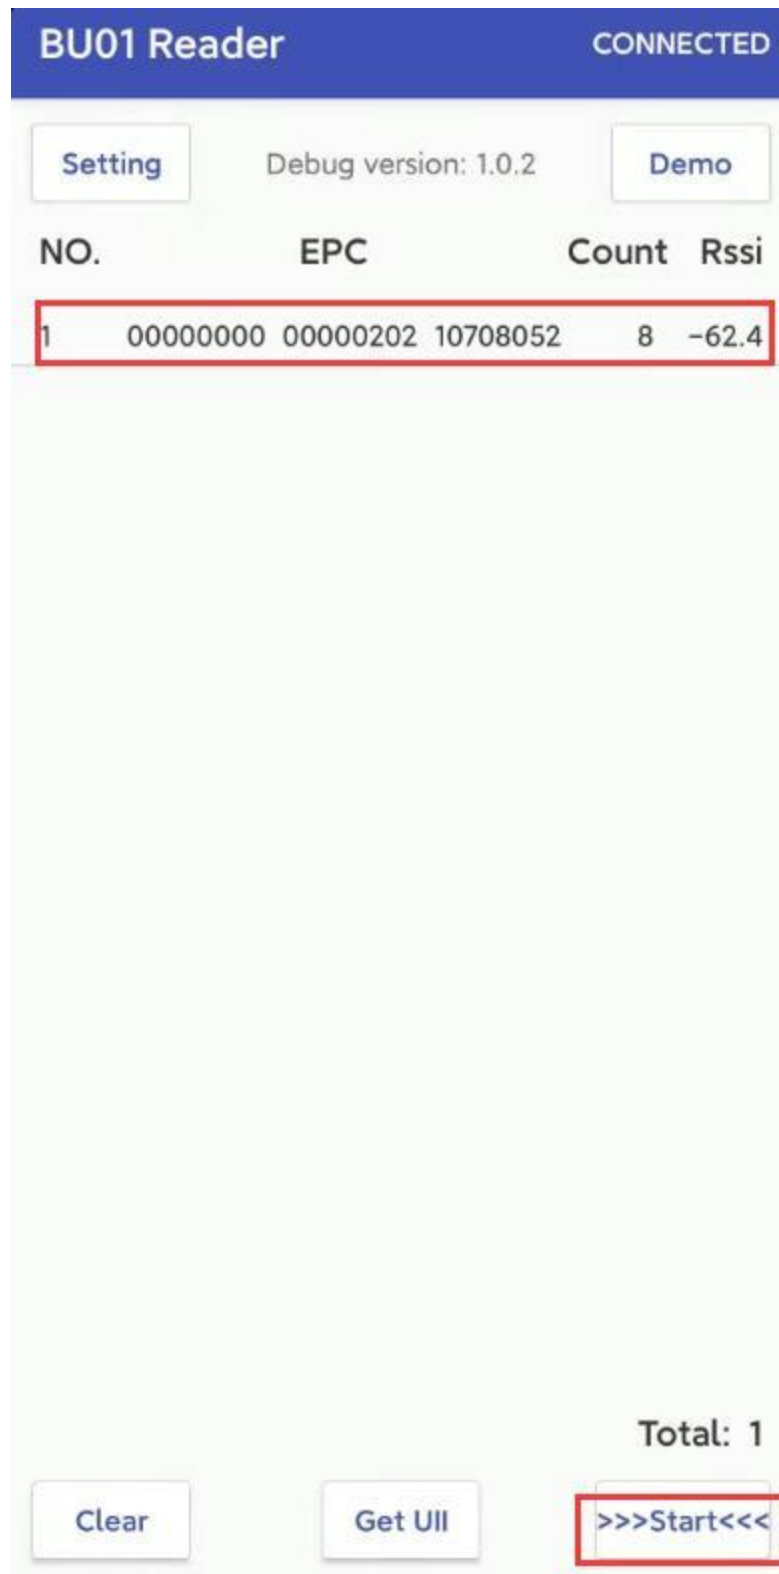

Step 3 : Click on RFU and set Start address to 5 and Length to 1

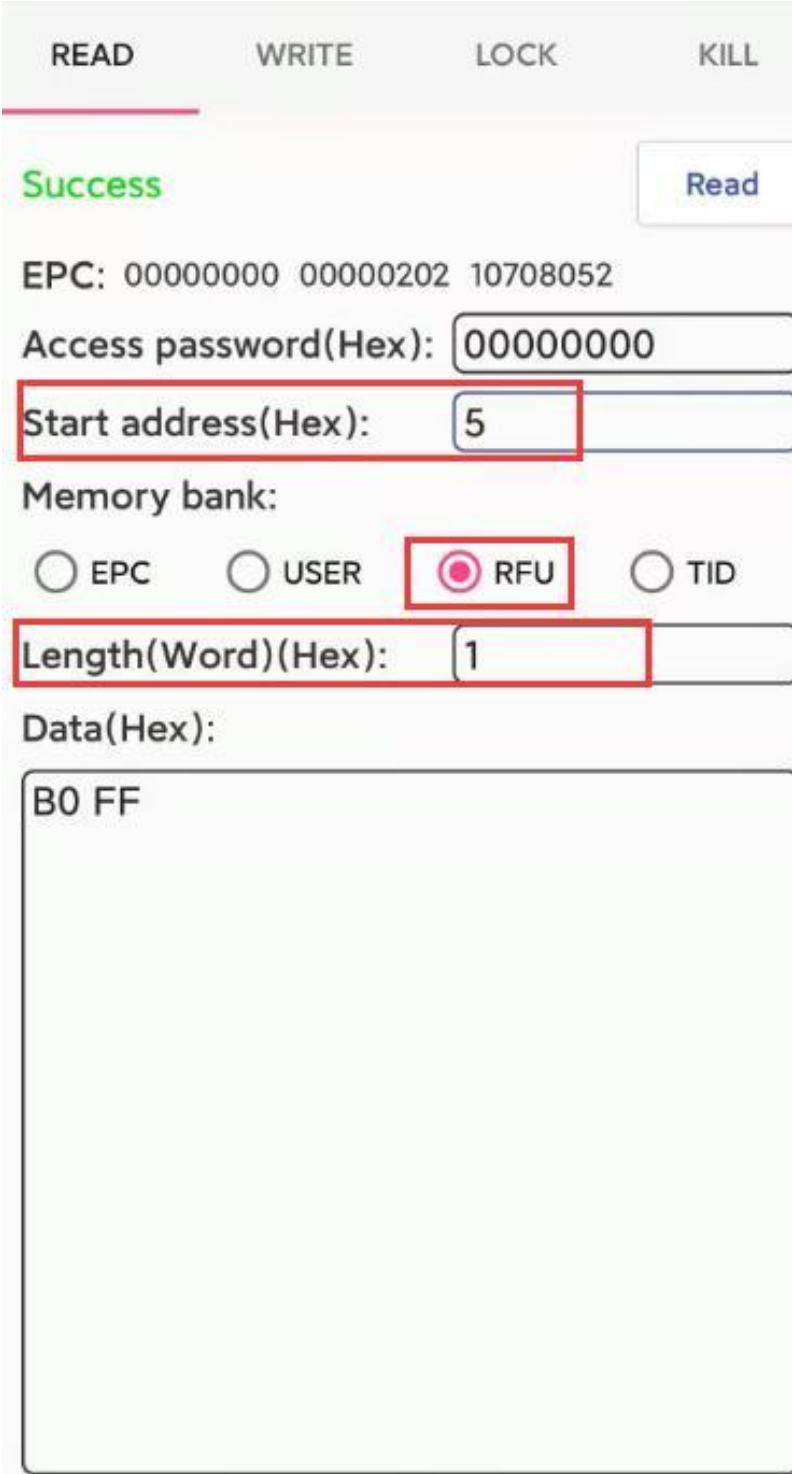

READ WRITE LOCK KILL

Success Read

EPC: 00000000 00000202 10708052

Access password(Hex): 00000000

Start address(Hex): 5

Memory bank:

EPC USER RFU TID

Length(Word)(Hex): 1

Data(Hex):

B0 FF

Input 0 in 'Start address' and 'Length', get data of the whole memory bank.

Step 4 : Click read to light up the specified label



Note:

1. There might has a bit different UI interface to active LED tag for for other readers, the setting of most parameters is same.
2. In order to operate easily and flash LED tag continuously with better brightness, a specified Customized APP with a key button could be organized for your project.